


NOTE:
THIS DETAIL SHALL APPLY
FOR ELECTRICAL CONDUITS,
PLUMBING AND FOR ANY
OTHER USES WHICH REQUIRE
NOTCHING.

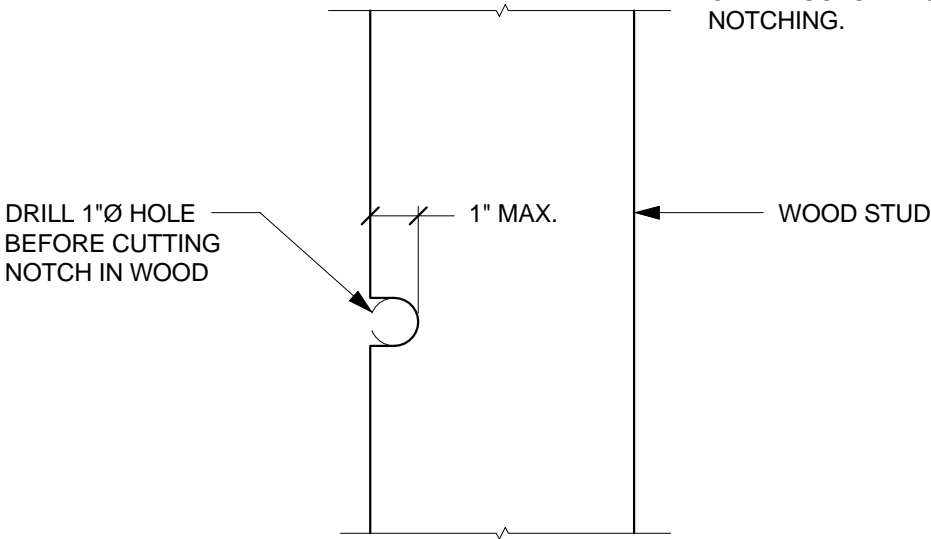

DRILL 1"Ø HOLE
BEFORE CUTTING
NOTCH IN WOOD

1" MAX.

WOOD STUD